

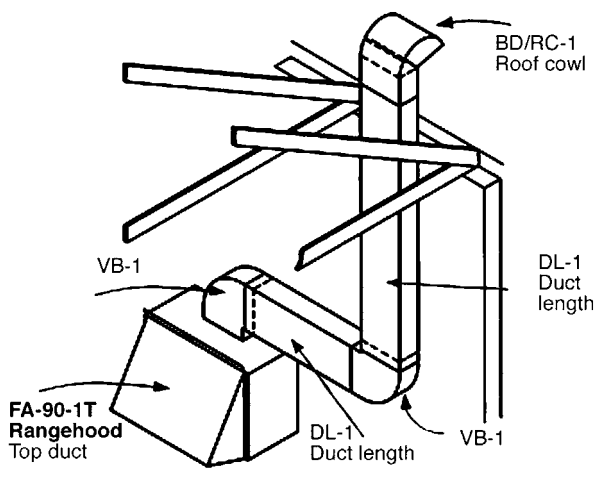


# INSTALLATION ideas

## 1. FA 60-1B

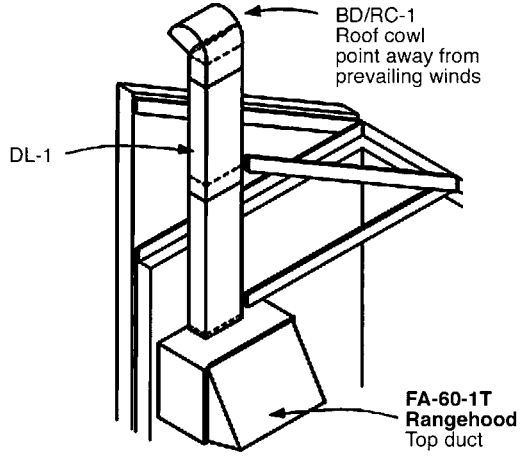


## 2. FA 90-1T

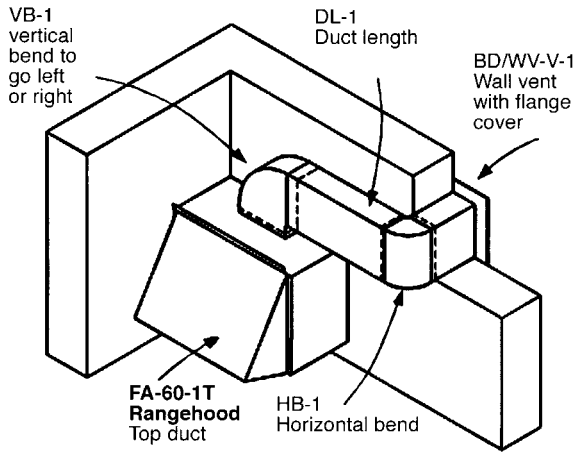


3. FA 60-1T


4. FA 60-1T

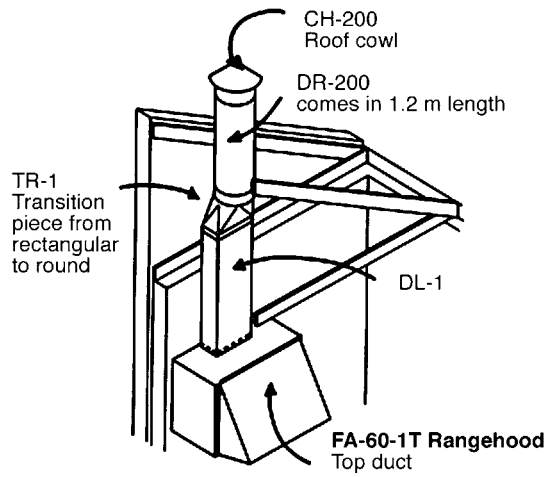


5. FA 60-1T

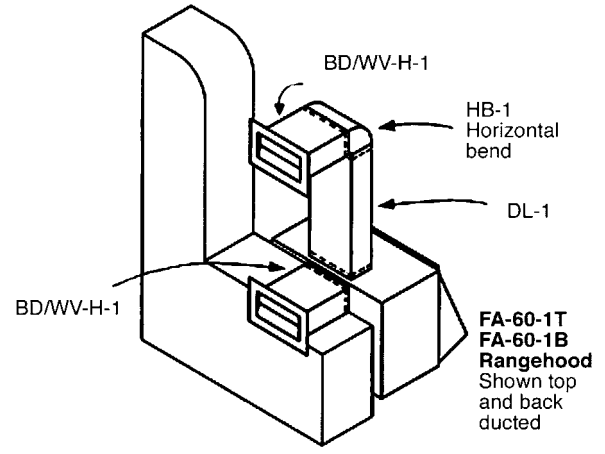


6. FA 60-1T / 60-1B

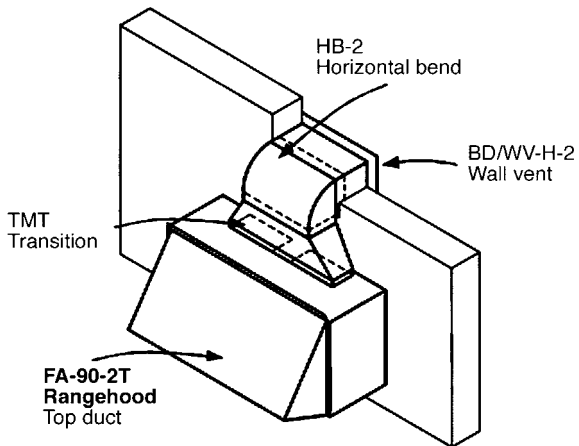


7. FA 90-2T

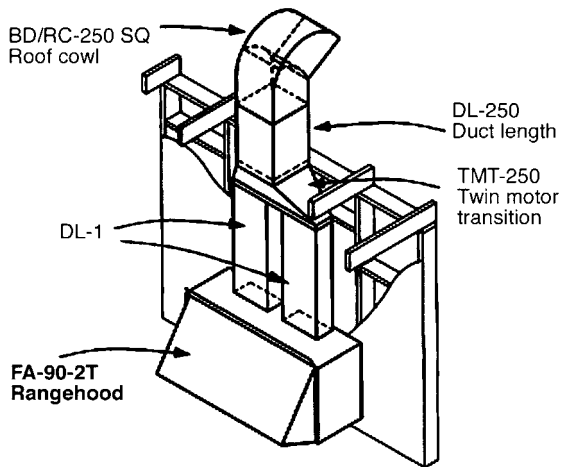


8. FA 90-2T

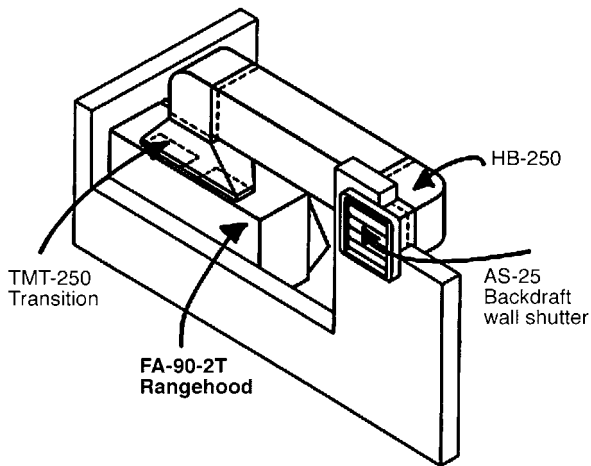


9. FA 90-2T

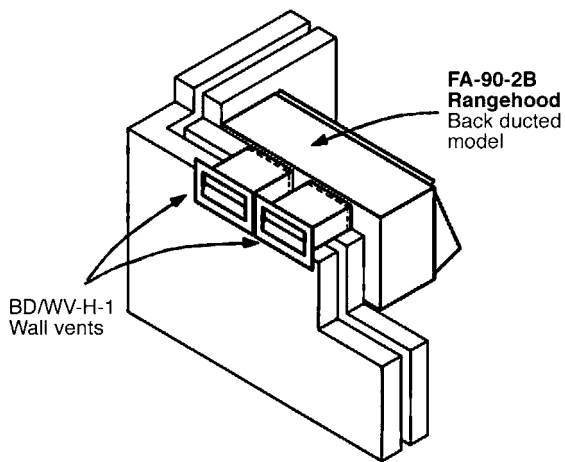


10. FA 90-2B

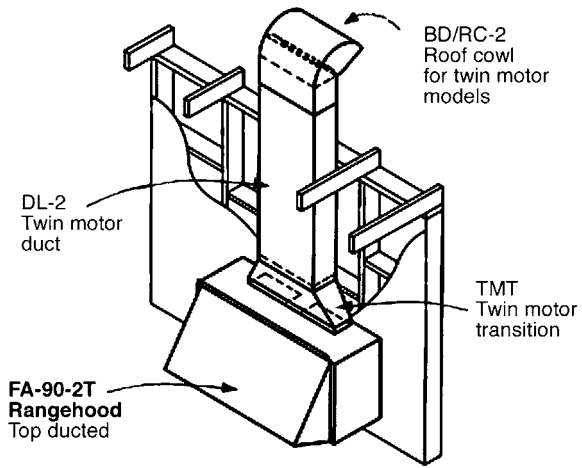


11. FA 90-2T

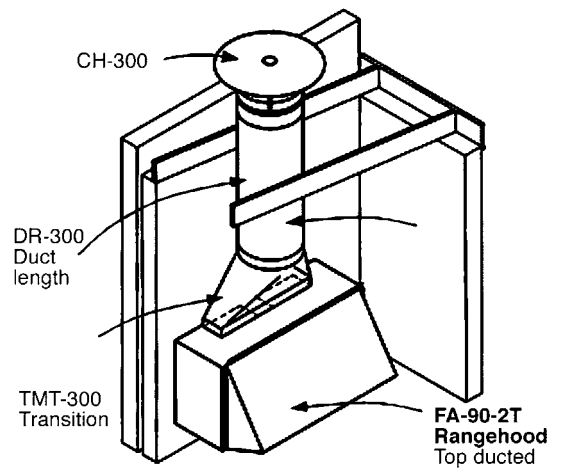


12. FA 90-2T

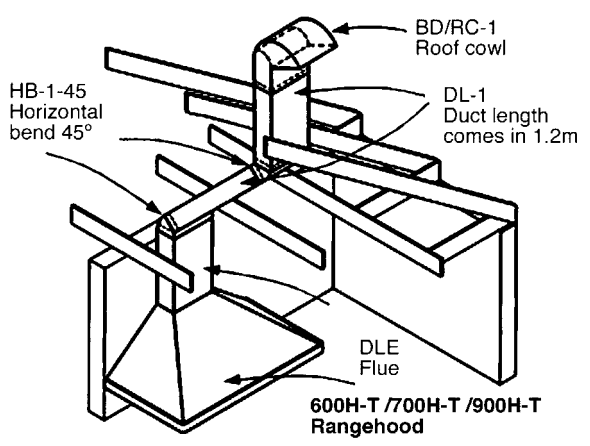


13. 600H-T / 700H-T / 900H-T

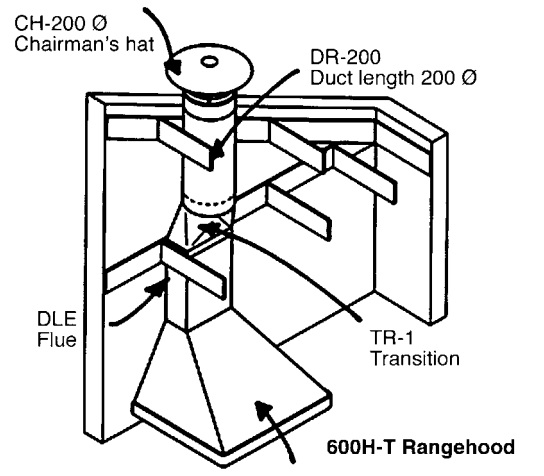


14. 600H-T

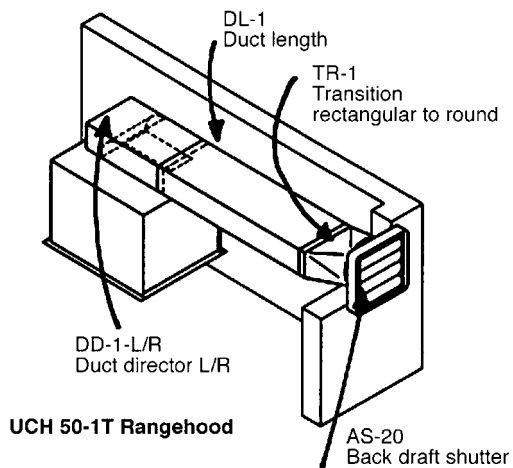


15. UCH 50-1T

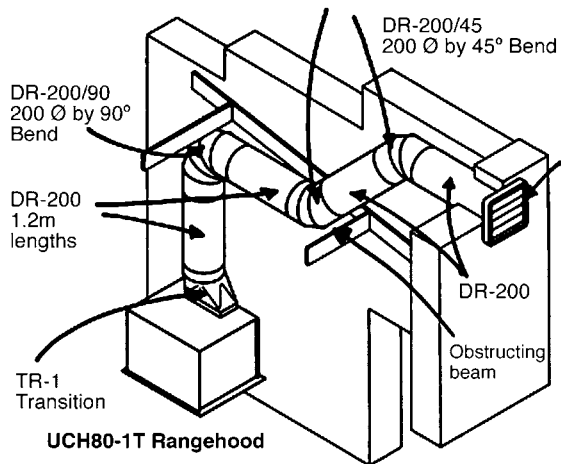


16. UCH 80-1T

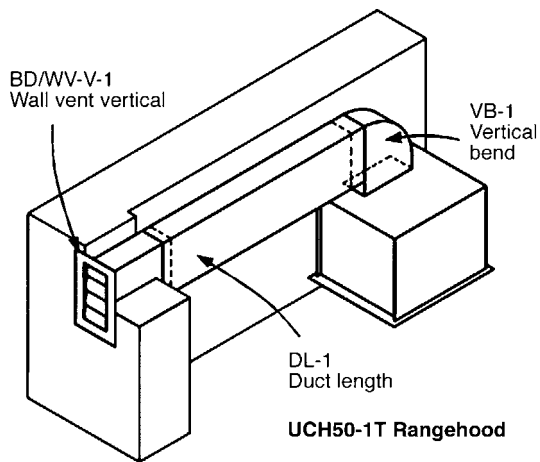


17. UCH 50-1T

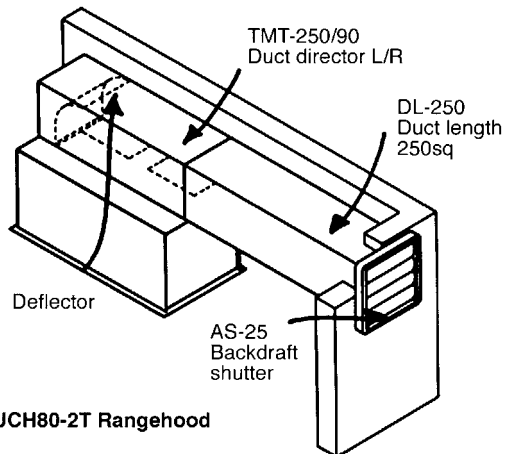


18. UCH 80-2T

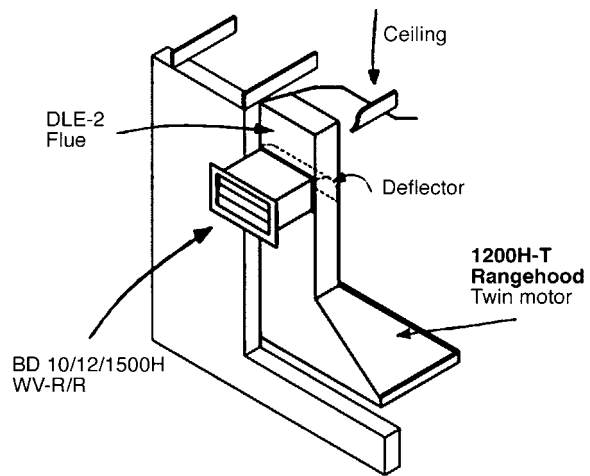


19. 1200H-T

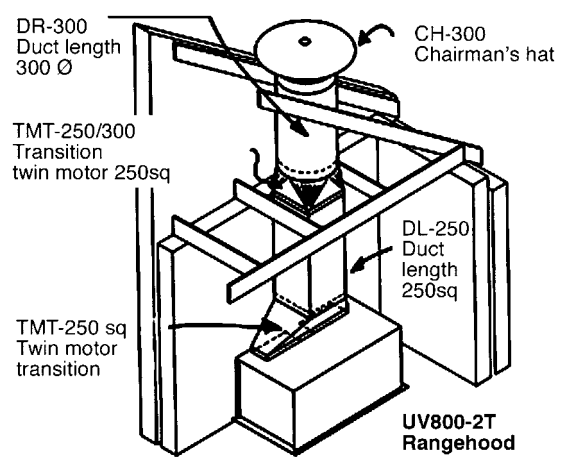


20. UV 800-2T

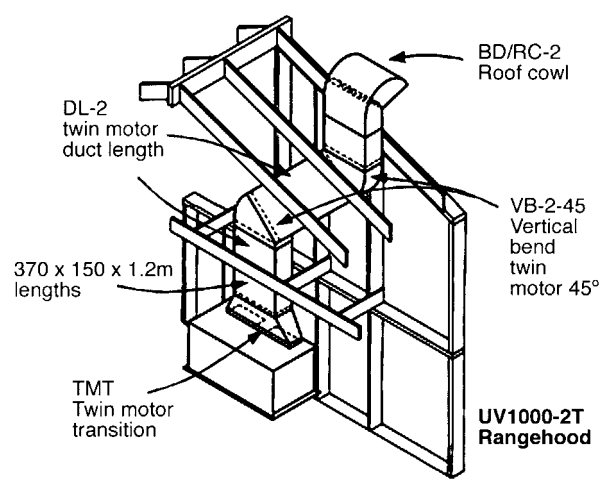


21. UV 1000-2T

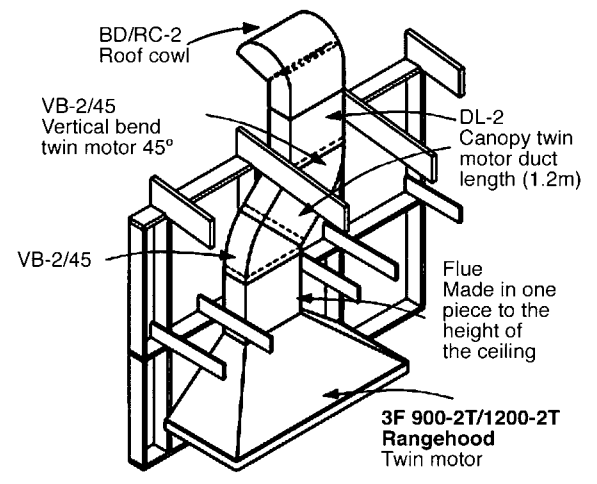


22. 3F 900-2T / 1200-2T

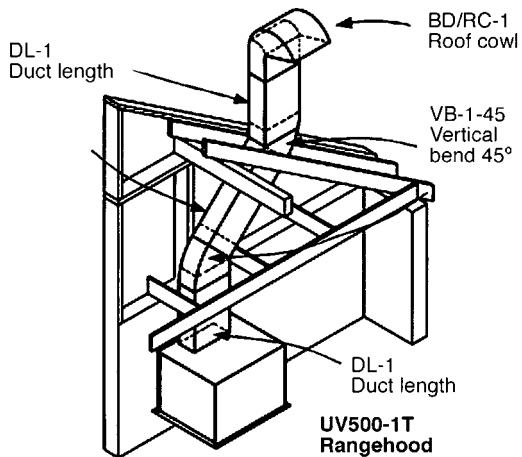


23. UV 500-1T

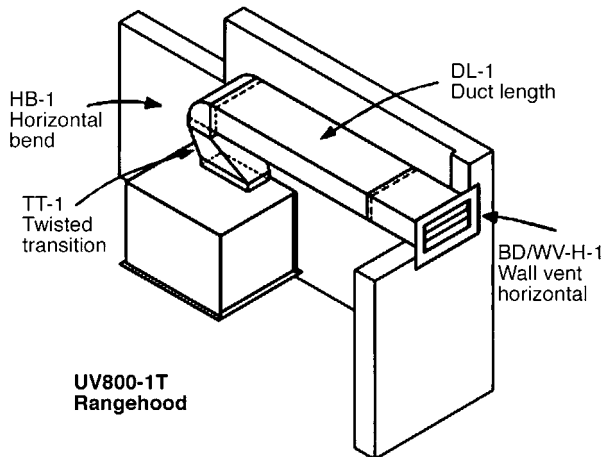

24. UV 800-1T

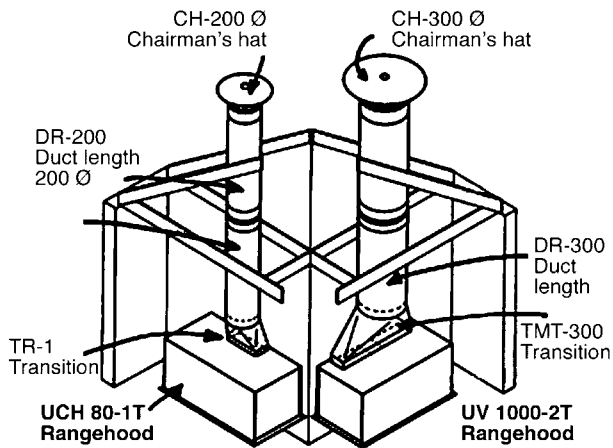

25. UCH 80-1T / UV 1000-2T

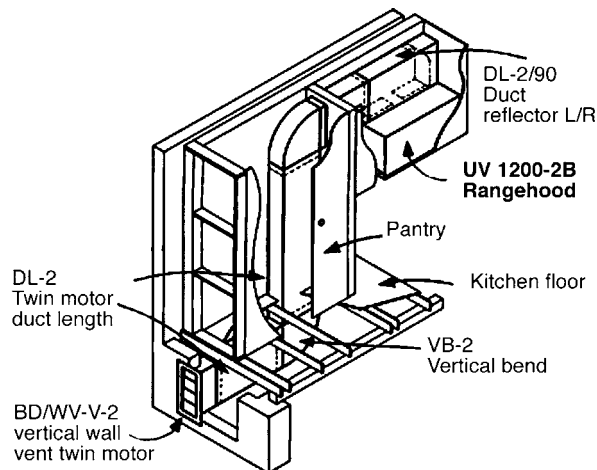

26. UV 1200-2B